

# Installation Guide for Zoom/Video Cam

Installing your new Zoom/Video Cam is easy:

## **1 Getting Started**

Prepare your computer. You have the option of using the Zoom/Video Capture Card or enabling an existing Zoom/Video Ready Faxmodem for video capture.

## **2 Installing the Internal Card**

**If you do not have a Zoom/Video Ready Faxmodem**, install the video capture card. This involves shutting off your computer and plugging the modem card into a slot on the main board of the computer. It's easy to do even if you've never had the case off your computer.

## **2A Updating Your Faxmodem**

**If you already have a Zoom/Video Ready Faxmodem**, or if you have just installed one, you can run a program that will upgrade the modem card and enable video capture.

## **3 Completing the Installation**

Plug in the Video Camera and install some software drivers so Windows knows what to do with the camera. The Windows Hardware Wizard guides you through most of the procedure. You can also plug in the lapel microphone that comes with your camera.

## **4 Installing Video Software**

Install **VideoLink** and **VideoLink Mail**, video programs that enable you to record video mail, do videoconferencing, and make video telephone calls. Also install other software that comes on your Zoom Link CD.

Each step is described in the accompanying numbered flyers. We suggest you read through all the flyers before

you begin. Then start with **Flyer 1** and just follow the numbers!

## **Additional Information**

The **Reference Guide** on the **Zoom Link CD** contains further information or expanded information that may be useful in installing and troubleshooting the Video Camera. It covers all current versions of the Video Camera and the Video Ready Faxmodem that is available separately or in combination with the Video Camera.

In the **Reference Guide**, you will find:

- Detailed instructions for removing an old device (usually a modem) in the unlikely event that you need to free up the computer's resources for the Video Camera. Unplugging a modem card from the computer does not "remove" the card from the Windows 95 or 98 operating system. It is necessary to tell Windows that you are going to remove a device; this allows Windows to reallocate its internal "resources" and make them available for a new device.
- Tips for using a Video Camera.
- Tips for using communications software with a Fax-modem.
- A troubleshooting guide.
- Several appendixes with further information or details that may be useful in troubleshooting.

## **Finding and Printing the Reference Guide**

A **Manuals** button is on the main installation interface of the **Zoom Link CD**. Clicking on this button will display a **Reference Guide** button. Click this button to display the Guide in Adobe Acrobat format. If you do not have Adobe Acrobat, you can install it from the **Zoom Link CD**.

You can read the **Reference Guide** on screen, or you can print it out for future reference (it is about 50 pages long). You can also print out just the pages you need.



## NOTICE

This document contains proprietary information protected by copyright, and this Installation Guide and all the accompanying hardware are copyrighted. All rights are reserved. No part of this document may be photocopied or reproduced by mechanical, electronic, or other means in any form, except for the personal use of the owner.

The manufacturer does not warrant that the hardware will work properly in all environments and applications.

Although the hardware has been tested, the manufacturer makes no warranty and representation, either implied or expressed, with respect to the hardware and the documentation, quality, performance, merchantability, or fitness for a particular purpose. The manufacturer reserves the right to make changes to the hardware and Installation Guide content without obligation to notify any person or organization of the revision or change.

All brand and product names are the trademarks of their respective owners.

**© Copyright 1998**

**All rights reserved.**